


# TEST FITTING AND MODIFYING OUR PATTERNS

- you will need
- writing utensil
  - scissors
  - tape
  - ruler
  - extra paper


1

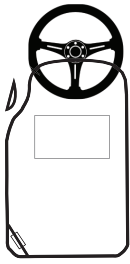

## TEST FIT AND MODIFICATION

Place the pattern in your vehicle. If our pattern fits, great news, you're done. Just email or call us with our pattern number located in the upper left corner. If not, modify the pattern to fit your vehicle by using scissors to remove coverage or adding extra paper with tape to extend the coverage.

2

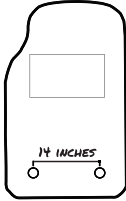


## MAT ATTACHMENTS

If your vehicle has floor mat attachments (via posts, twists, snaps, or velcro), draw a small circle at the exact location of each attachment on the pattern. If a pattern has two attachments, measure the distance between the exact center of each circle and write the measurement on the pattern. If your car has velcro attachments, write "velcro" next to the drawn circle.

Scan QR for attachment information




3

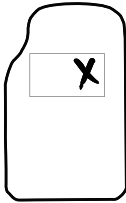

## HEEL PAD LOCATION

For heel pad location, place the "X" sticker (provided) on the driver pattern where your heel hits the pattern while driving. No heel pad may be requested by writing "no heel pad" on the driver pattern.


4

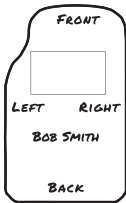

## LABELING YOUR PATTERN

For the accurate pattern direction, write your name on the top side of all paper patterns. On this same side, write where the front, back, left, and right locations are on the pattern.

5

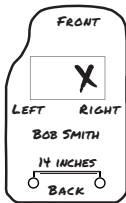

## CONFIRM AND MAIL

Confirm steps 1 - 4. Once completed, use the enclosed envelope to mail us your modified pattern.

CocoMats.com Attn:Patterns  
236 Zimmer Rd.  
Fort Mill, SC 29707