


TRACING A MAT PATTERN

- you will need
- current fabric mats
 - paper
 - writing utensil

flip for instructions »


1 ☒

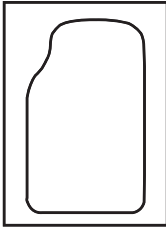

TRACING A PATTERN

Remove your fabric mats from your vehicle (don't trace rubber mats) and place the mats on the paper provided. Using a writing utensil, trace along the edge of each mat. Use a separate piece of paper for every floor mat. **Do not cut out the tracing from the paper.** This is done at our facility to specific company guidelines.


2 ☐

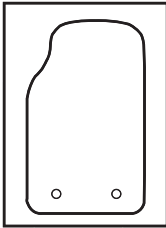

MAT ATTACHMENTS

If your floor mats have holes for attachments, draw a circle through the hole of each attachment onto the paper. If your mats have velcro attachments (located under the mat), draw a circle at the exact location of each attachment and write "velcro" inside the circle.


3 ☐

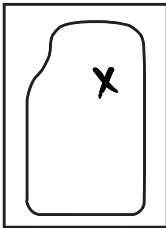

HEEL PAD LOCATION

For heel pad location, place the "X" sticker (provided) on the driver pattern where your heel hits the pattern while driving. Your current floor mat will usually have a wear spot at this location. No heel pad may be requested by writing "no heel pad" on the driver pattern.


4 ☐

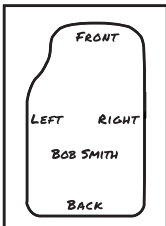

LABELING YOUR PATTERN

For the accurate pattern direction, write your name on the top side of all paper patterns. On this same side, write where the front, back, left, and right locations are on the pattern.

5 ☐

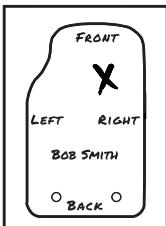

CONFIRM AND MAIL

Confirm steps 1 - 4. Once completed, use the enclosed envelope to mail us the paper with the traced patterns.

CocoMats.com Attn:Patterns
236 Zimmer Rd.
Fort Mill, SC 29707

For more information, please visit www.cocomats.com/patterns
email: patterns@cocomats.com phone: 704-241-3897